

- Any repair or maintenance needs identified should be repaired within 48 hours or sooner if natural receptors are at imminent and foreseeable risk of adverse impact.
- Ensure the inlet grate is not being unintentionally blocked by the protection device.

Decommissioning

- Remove accumulated sediment.
- Carefully remove inlet inserts by the handles. Remove all components of the inlet protection devices so as to minimize disturbance of the area and accidental release of sediment into the inlet.

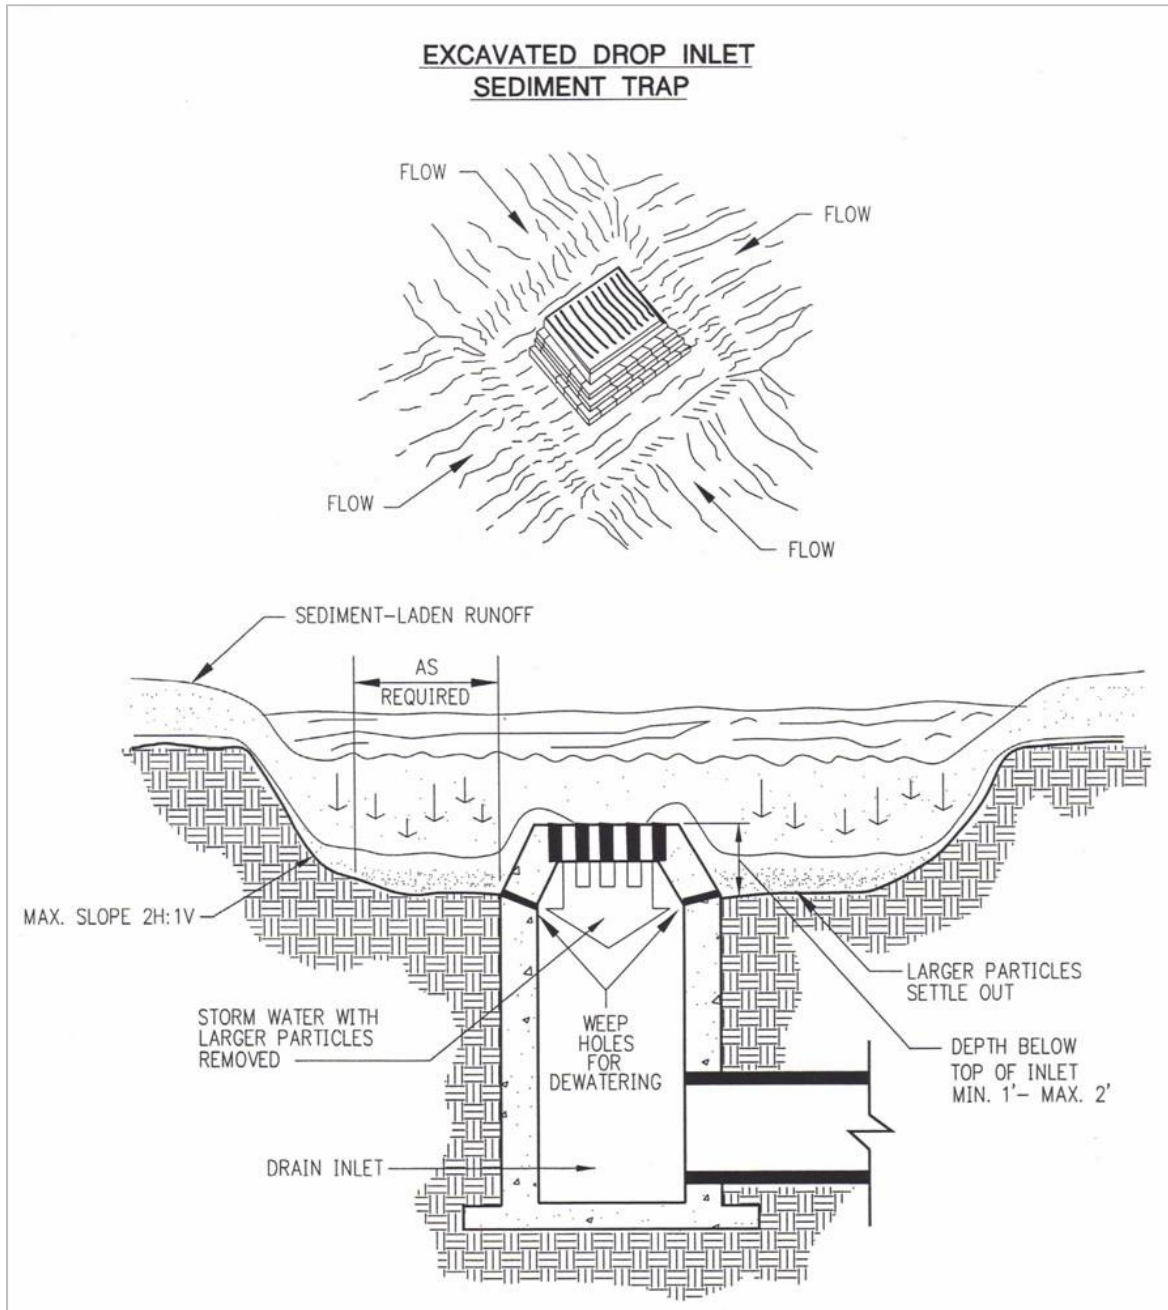


Figure B2-13: Excavated drop inlet structure for trapping sediment